


K206-10U1 9.6" Liquid Crystal Display TV

 
This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

Front View

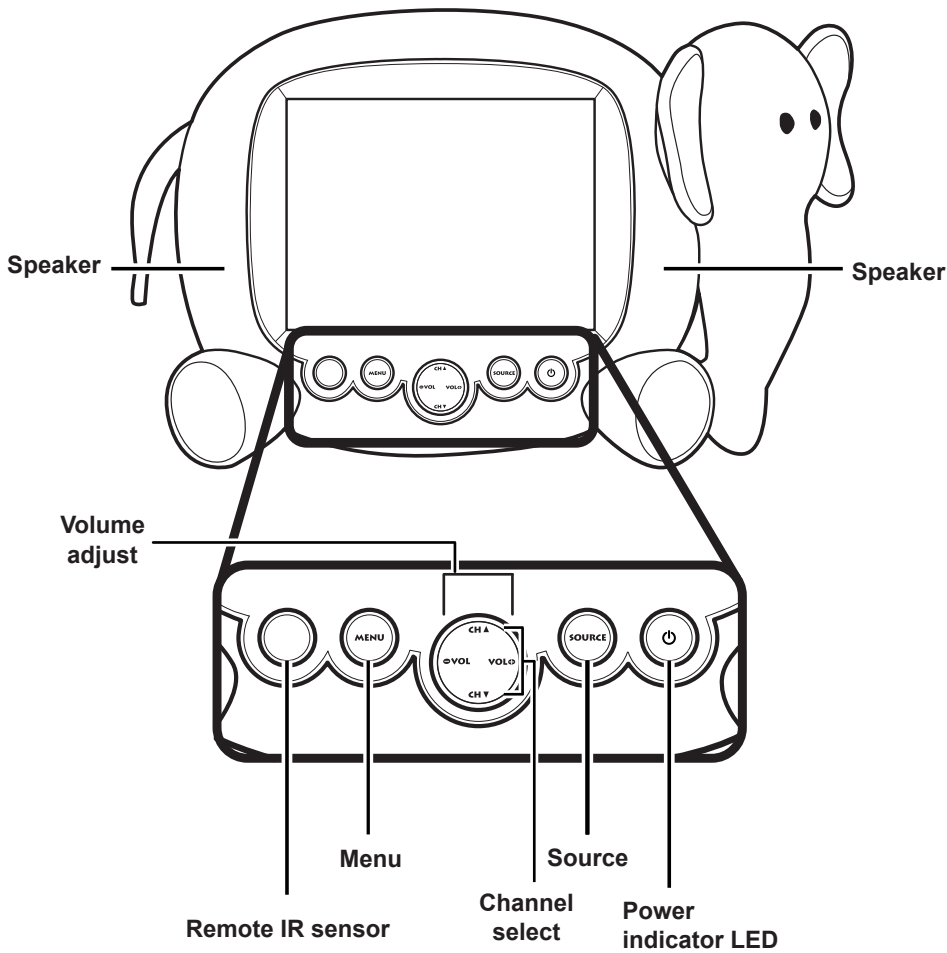

Other Models


The information in this Quick Start Guide applies to all models shown below.




Note: Do not unzip the plush cover. The plush cover may only be removed by the qualified personnel to service the product.

Making Connections


Connecting to Antenna/Cable TV

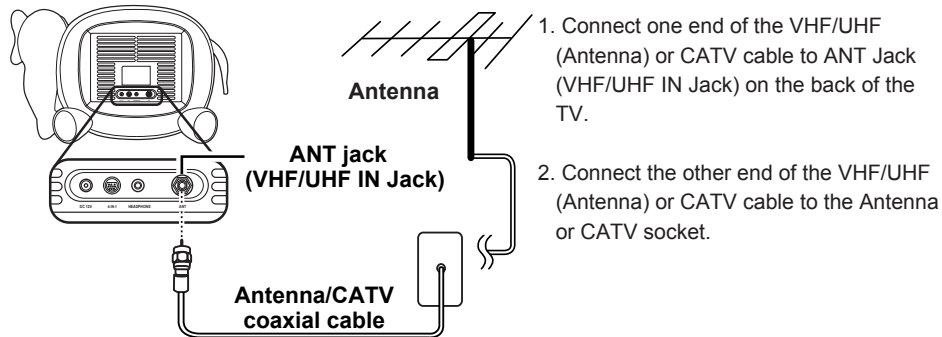

Connecting to a VCR, VCD, DVD Player, or Video Game Console

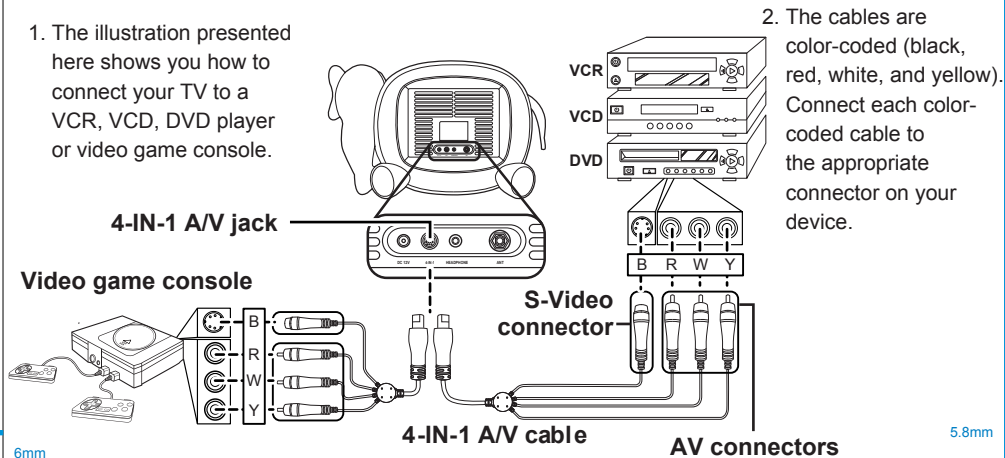


Connecting the Power Adapter

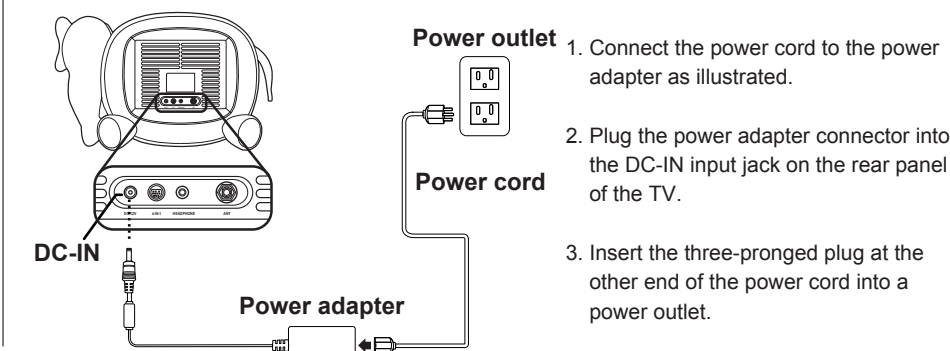

A/V and Channel Setup


Watching Broadcast or Cable TV

 - After you have made the appropriate power and source connections, press the power button to turn on your television.
- Press the **SOURCE** button to select TV.
- Press the **MENU** button on the control panel to enter the OSD menu.
- Press the **CH ▲** button to select the TV setting.
- Press the **MENU** button.
- Press the **CH ▲** or **CH ▼** button to select TV/CATV.



Selecting A/V Sources

- Make sure your TV is turned on and a device such as a DVD player is connected.
- Press the **SOURCE** button on the control panel to select different source signals. TV/CATV channel number, AV or S-Video will appear on the screen.

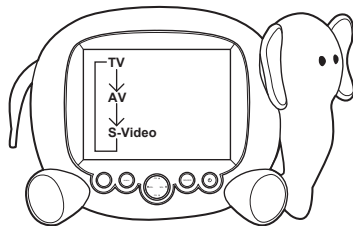

Auto Channel Setup

- Press the **MENU** button to enter the OSD menu.
- Use the channel buttons on the control panel to select the "TV Setting" menu.
- Press menu again until the "Auto Program" feature is selected.
- Press **CH ▼** to select yes.
- Press the **MENU** button.
- Your television will begin automatically memorizing the available channels.

Auto Program

